

H125

Emergency access and rescue from helicopter



IMPORTANT NOTE

This Ground rescue booklet provided by Airbus Helicopters gives general and safety information concerning the H125. This document shall only be considered as a support for users to prepare their own documentation.

It will not be systematically updated in line with the aircraft modification process.

Depending on the country and the modification status of the helicopter, systems may differ in their location.

This information booklet is provided free of charge by Airbus Helicopters. Wide-spread dissemination to firefighters and rescue teams around the world is strongly encouraged. Copies can be downloaded from the Airbus Helicopters web site.

Original issue July 1st, 2019 Revision 1 - October 3, 2019

Revision 1 Page 1/17



CONTENTS

1	GENERAL INFORMATION	3
	MAXIMUM GROSS WEIGHT	3
	OCCUPANCY	3
	DIMENSIONS	3
	POWERPLANTS	4
	FUEL CAPACITY	4
	OIL CAPACITY	5
	HYDRAULIC FLUID CAPACITY	5
	COMPOSITE USAGE	6
2	SAFETY INFORMATION - OUTSIDE THE AIRCRAFT	7
	DANGER AREA WITH ROTOR TURNING	
	EMERGENCY FLOATATION GEAR	7
	PITOT	
	LUGGAGE HOLD	8
	FIREFIGHTING RECOMMENDATIONS	g
	GENERAL	g
	FIRE AROUND THE AIRCRAFT	g
	FIRE IN THE ENGINE COMPARTMENT	10
	FIRE IN THE MAIN GEAR BOX (MGB) COMPARTMENT	11
	FIRE IN THE LUGGAGE COMPARTMENT	12
	EMERGENCY ACCESS	13
	COCKPIT DOORS	13
3	SAFETY INFORMATION - INSIDE THE AIRCRAFT	14
	COCKPIT LAYOUT	
	ELECTRICAL SHUTDOWN	15
	BATTERY	15
	ENGINE SHUTDOWN	16
	ROTOR BRAKING	16
	ENGINE FIRE DETECTION AND EXTINGUISHING SYSTEM	17
	SAFETY RELTS	17



1 GENERAL INFORMATION


MAXIMUM GROSS	WEIGHT	2250 kg	7

OCCUPANCY

- Crew	one pilot
- Passenger transport:	up to 5 passengers
- High density transport:	up to 6 or 7 passengers
- VIP:	up to 4 passengers
- Medevac transport:	up to 2 medical stretchers

DIMENSIONS

Fuselage length:	10.93 m
Fuselage width:	2.17 m
Horizontal Stabilizer width:	2.53 m
Rotor diameter:	10.69 m

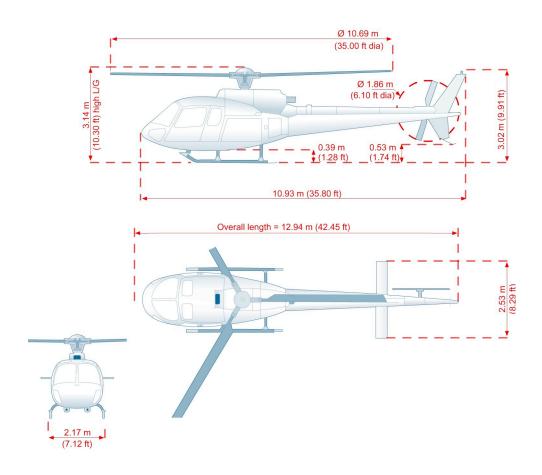


Revision 1 Page 3/17






POWERPLANTS	SAFRAN Helicopter	Engines A	rriel 2D (one
FUEL CAPACITY		Ur	o to 540	liters

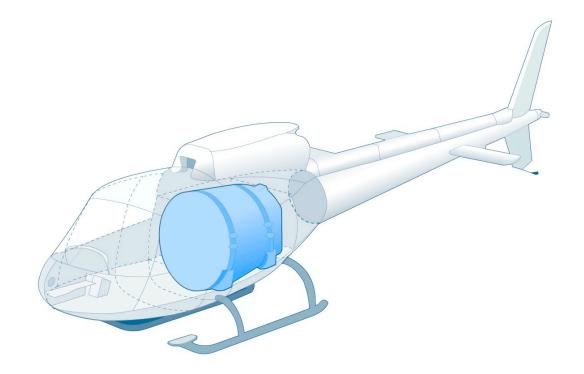

ADDITIONAL FUEL TANK

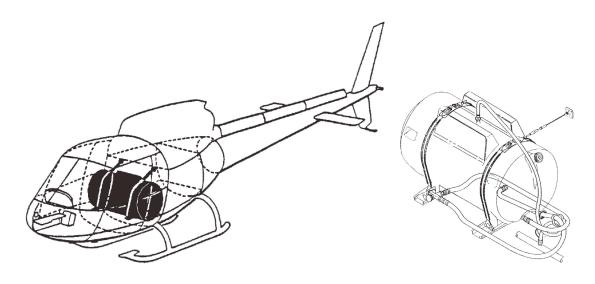

Revision 1 Page 4/17






OIL CAPACITY


Engine oil	6.2 I
Main Transmission	6.5 I
Tail gear box).33 I

HYDRAULIC FLUID CAPACITY

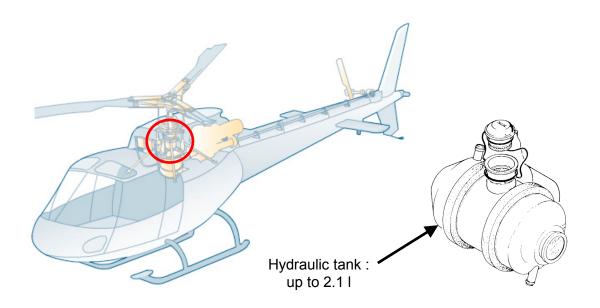



COMPOSITE USAGE

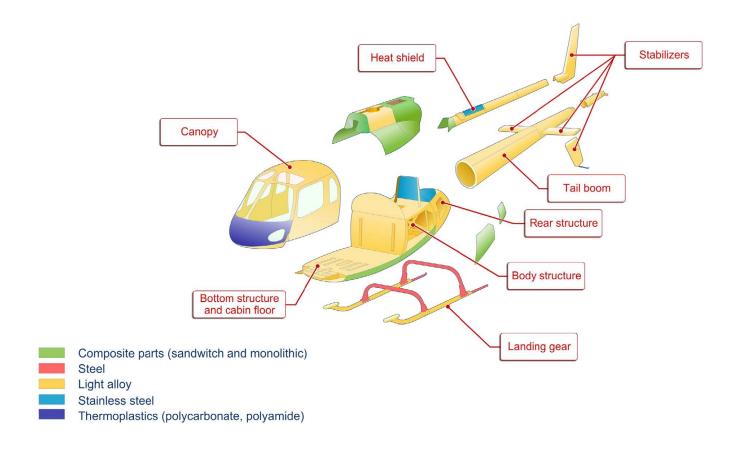

Revision 1 Page 6/17




2 SAFETY INFORMATION - OUTSIDE THE AIRCRAFT

AIRCRAFT MAY BE CHARGED WITH STATIC ELECTRICITY.
WEAR GLOVES AND IF POSSIBLE DISCHARGE THE AIRCRAFT
BY ESTABLISHING AN ELECTRICAL GROUND.

DANGER AREA WITH ROTOR TURNING



EMERGENCY FLOATATION GEAR

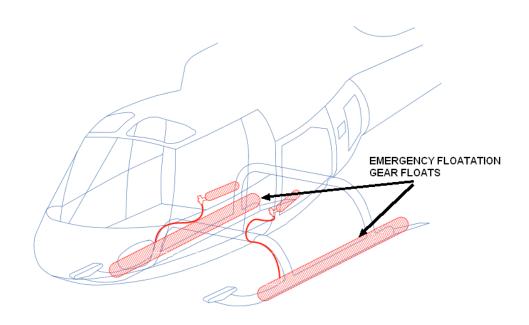

Revision 1 Page 7/17



PITOT

PITOT IS HEATED IN FLIGHT AND CAN CAUSE BURNS.



LUGGAGE HOLD

The vast luggage hold is accessible from left side of the helicopter. Loads and objects must be stowed and secured



Revision 1 Page 8/17



FIREFIGHTING RECOMMENDATIONS

GENERAL

- 1) GROUND STAFF MUST BE IN CONTACT (RADIO / VISUAL SIGNS) WITH THE AIRCREW IN ORDER TO COORDINATE AND SECURE THE INTERVENTION.
- 2) GROUND STAFF MUST WEAR ADEQUATE PROTECTIVE EQUIPMENT.

FIRE AROUND THE AIRCRAFT

If possible, wait for the rotor to come to a complete stop.

FUEL LEAKAGE ALONG THE AIRCRAFT STRUCTURE AND/OR PRESENCE OF FIRE ON GROUND MUST BE FOUGHT FIRST WITH FOAM.

- Cool external adjacent structures with foam or water spray.

Revision 1 Page 9/17



FIRE IN THE ENGINE COMPARTMENT

- 1) WAIT FOR ENGINE AND ROTOR TO COME TO A COMPLETE STOP.
- 2) THE TEMPERATURE OF THE ENGINE EXHAUST NOZZLE COULD BE VERY HOT (UP TO 600°C).



- Spray the extinguishing agent (gaseous extinguisher recommended) between engine exhaust and engine nozzle.
- Proceed in circular movements until saturation.

Revision 1 Page 10/17



FIRE IN THE MAIN GEAR BOX (MGB) COMPARTMENT

WAIT FOR ENGINE AND ROTOR TO COME TO A COMPLETE STOP.



- Spray the extinguishing agent through the easiest available way (gaseous extinguisher recommended) to saturate the MGB compartment. Do not try to open the cowlings.
- In case of severe flash-over, use foam.

Revision 1 Page 11/17



FIRE IN THE LUGGAGE COMPARTMENT

REMINDER: DO NOT TRY TO OPEN THE CARGO DOORS WITH THE ROTORS SPINNING.

DO NOT OPEN THE CARGO DOORS IF SOMEONE IS TRYING TO EVACUATE THROUGH THE SLIDING DOORS.




- The lateral cargo doors are on both sides.
- The rear cargo door is on the left side.
- Saturate the cargo compartments with the extinguishing agent (gaseous extinguisher recommended).

Revision 1 Page 12/17



EMERGENCY ACCESS

COCKPIT DOORS

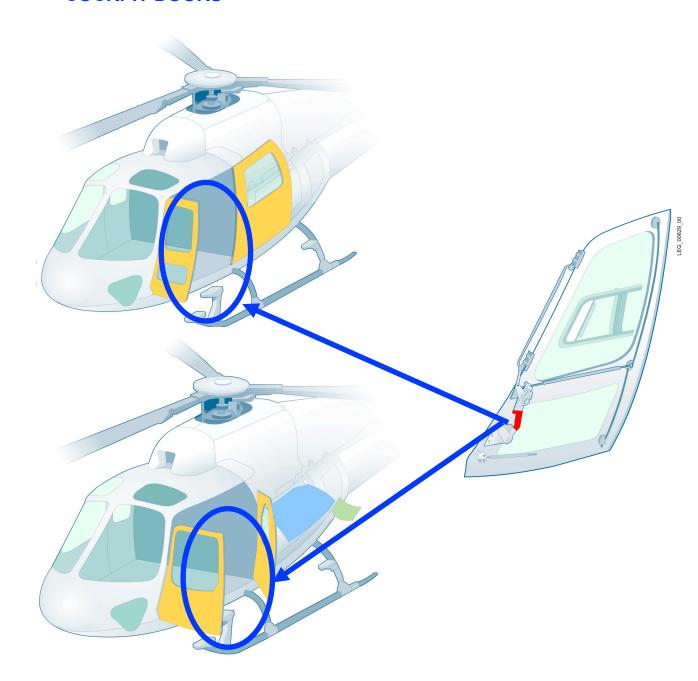


Doors can be jettisoned by actuating the jettison handle. It causes the door to fall away. The handle can be actuated only from the inside

Revision 1 Page 13/17



3 SAFETY INFORMATION - INSIDE THE AIRCRAFT COCKPIT LAYOUT

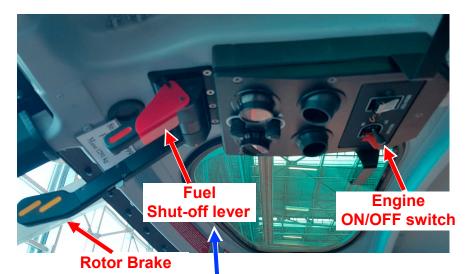

Overhead Panel

BATT switch

Console


THE FOLLOWING PROCEDURES ARE TO BE USED IN CASE OF EMERGENCY ON GROUND ONLY IF PILOTS ARE INCAPACITED.

Revision 1 Page 14/17



ELECTRICAL SHUTDOWN

BATT switch in **OFF** position

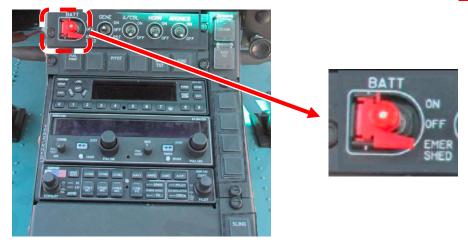


BATTERY

The aircraft battery is located on the right lateral cargo door.



CAUTION

Disconnect battery only when the engine is switched off and rotors are stopped

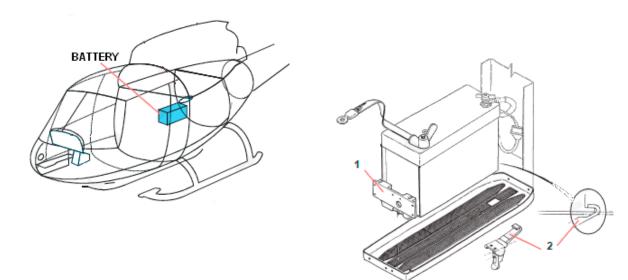

Alkaline type with 20 cadmium-nickel cells.


- Normal voltage: 24V Normal capacity: 16A.hr
- Weight: 15.2 Kg.
- Thermal switch closure: 71°C

Revision 1 Page 15/17



ENGINE SHUTDOWN


- Engine control switch OFF orFuel shut-off lever Rearward.

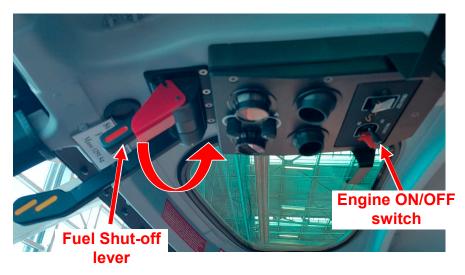

ROTOR BRAKING

ENGINE MUST BE STOPPED BEFORE APPLYING ROTOR BRAKE.

Move the rotor brake safety control lever in rearward position to enable the rotor braking through the rotor braking lever.

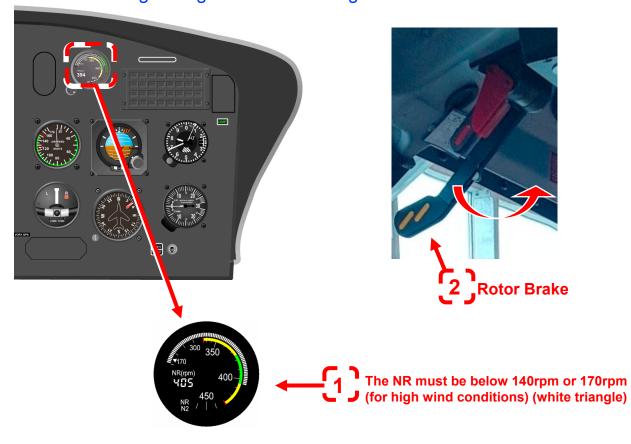

Revision 1 Page 16/17




ENGINE FIRE DETECTION



In case of engine fire detection, apply the engine shutdown procedure and refer to the fire in engine compartment paragraph.

SAFETY BELTS

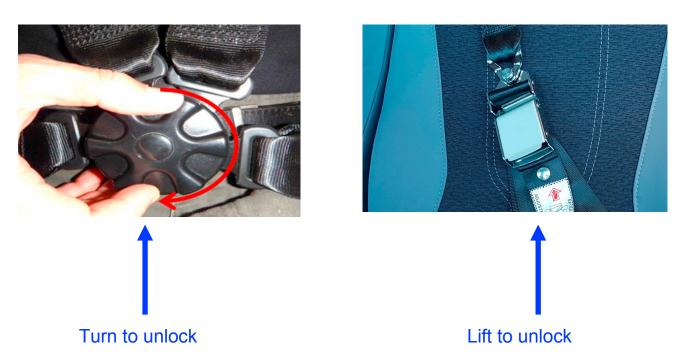

Revision 1 Page 17/17