



A300-600ST

Aircraft Rescue and Fire Fighting Chart ARFC

The content of this document is the property of Airbus S.A.S.
It is supplied in confidence and commercial security on its
contents must be maintained.
It must not be used for any purpose other than that for which it is
supplied, nor may information contained in it be disclosed to un-
authorized persons. It must not be reproduced in whole or in part
without permission in writing from the owners of the copyright.
Requests for reproduction of any data in this document and the
media authorized for it must be addressed to Airbus.

© Airbus S.A.S. 2002. All rights reserved.

AIRBUS S.A.S.
31707 BLAGNAC CEDEX, FRANCE
CUSTOMER SERVICES
TECHNICAL DATA SUPPORT AND SERVICES
PRINTED IN FRANCE
©AIRBUS S.A.S. 2002
ALL RIGHTS RESERVED

AN EADS COMPANY

 **A300-600 ST**
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

NOTE

THIS CHART GIVES THE GENERAL LAYOUT OF THE A300-600ST STANDARD VERSION.
THE NUMBER AND ARRANGEMENT OF THE INDIVIDUAL ITEMS VARY WITH THE CUSTOMERS.

ISSUED BY:

AIRBUS S.A.S.
CUSTOMER SERVICES
TECHNICAL DATA SUPPORT AND SERVICES
31707 BLAGNAC CEDEX
FRANCE

REVISION DATE: JUNE 2007
REFERENCE : K_RF_000000_1_A3006ST

 **A300-600ST**
AIRCRAFT RESCUE AND FIRE FIGHTING CHART

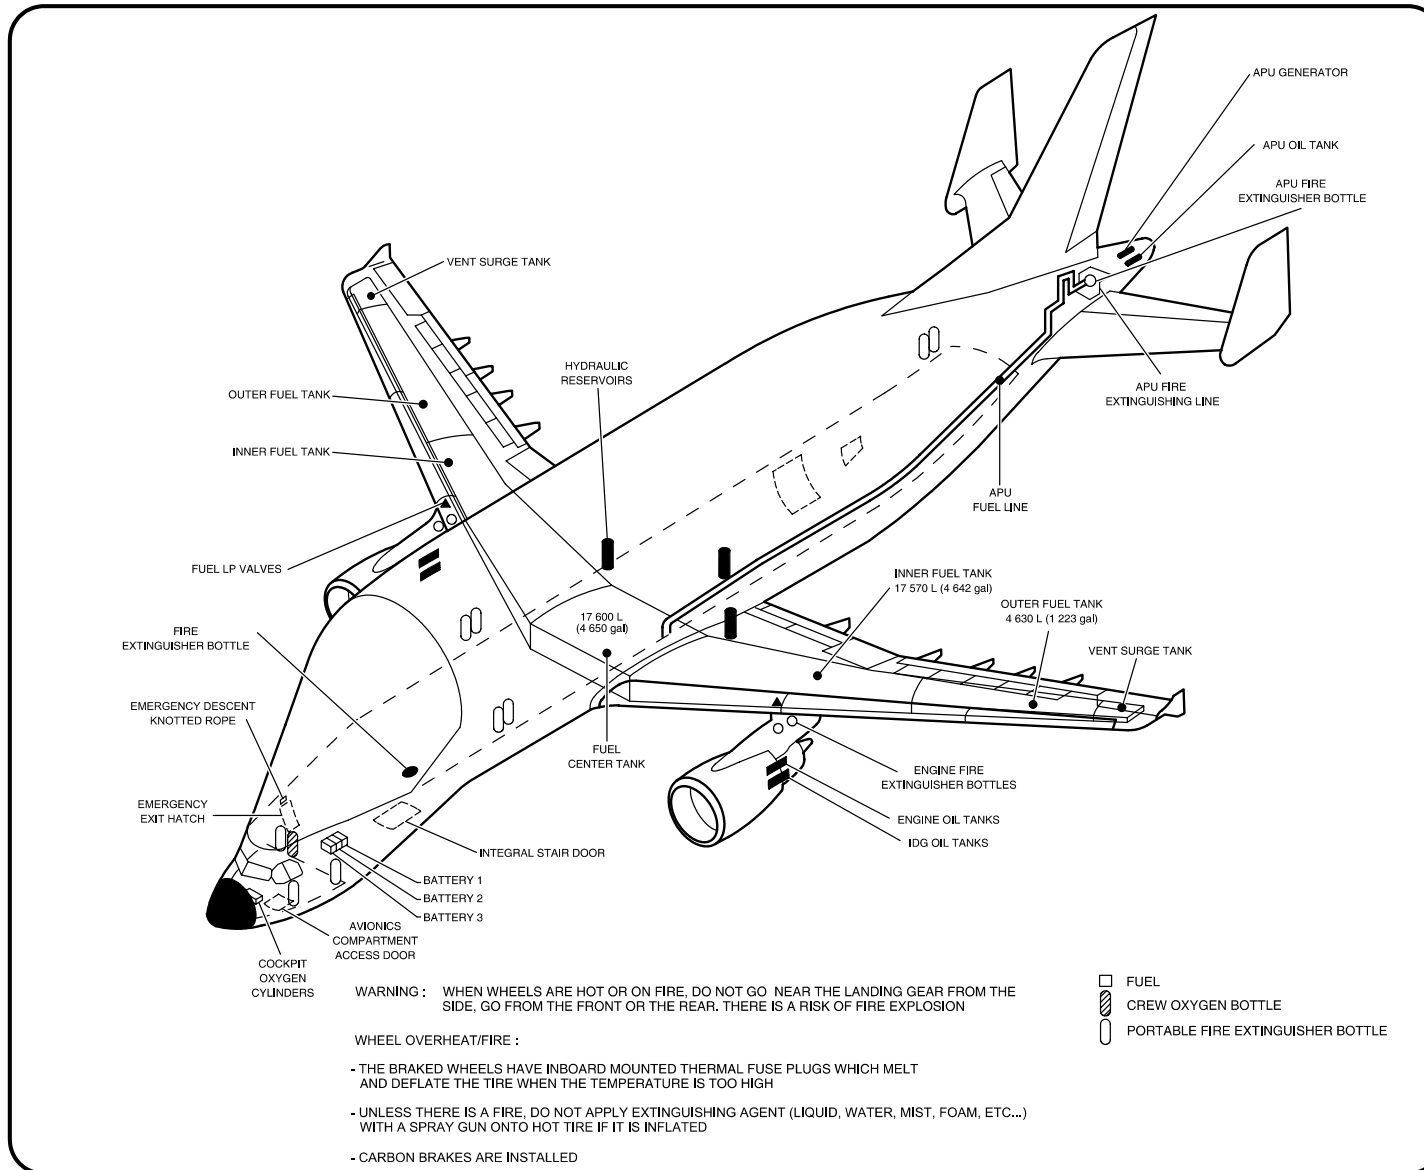
 **A300-600 ST**
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

TABLE OF CONTENTS

Page 1	Highly Flammable Materials and Hazardous Components - Location
Page 2	Composite Materials - Location
Page 3	Landing Gear Ground Lock Safety Pin - Installation
Page 4	Interphone Jack Sockets - Location
Page 5	Crew Doors - Opening
Page 6	Cargo Door - Opening
Page 7	Batteries and Control Panel - Location
Page 8	Emergency Exit Light Control Panel - Location
Page 9	Emergency Exit - Opening
Page 10	Engine and APU Controls and FIRE Panels - Location
Page 11	Bulk Cargo Compartment Door Control
Page 12	APU Compartment Access
Page 13	Aircraft Ground Clearances




A300-600 ST


AIRCRAFT RESCUE AND FIRE FIGHTING CHART



Highly Flammable Materials and Hazardous Components - Location


A300-600 ST
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

-  Carbon Fiber Reinforced Plastic (CFRP)
-  Glass Fiber Reinforced Plastic (GFRP)
-  Aramid Fiber Reinforced Plastic (AFRP)

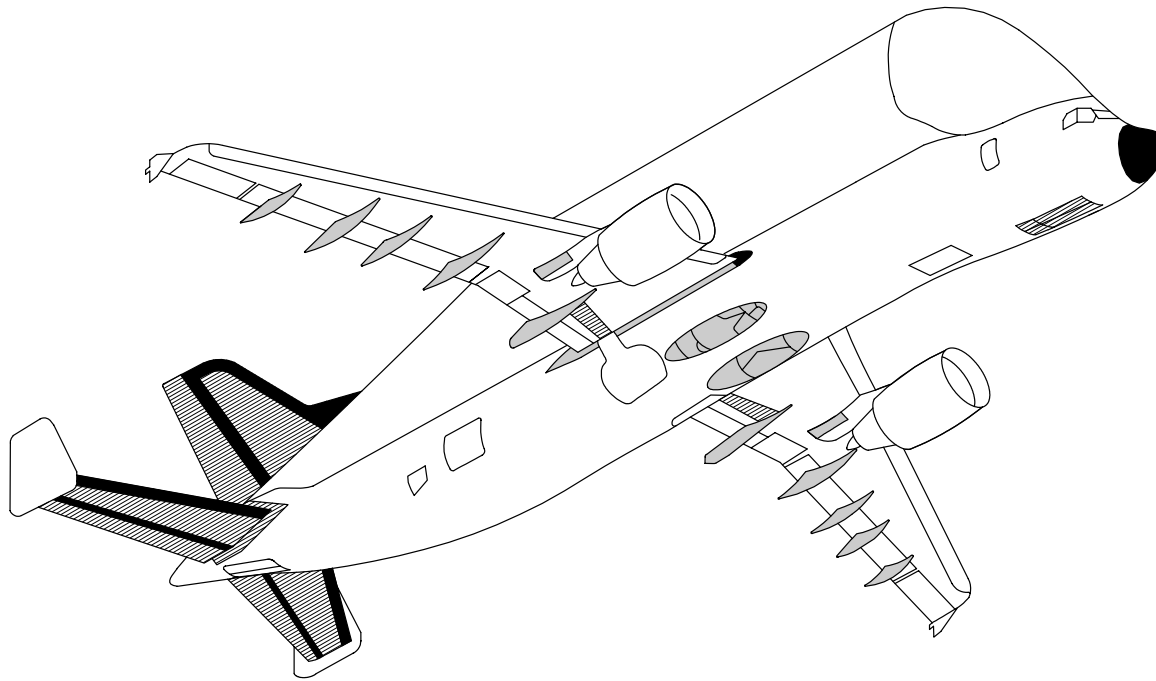


Composite Materials - Location

A300-600 ST
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

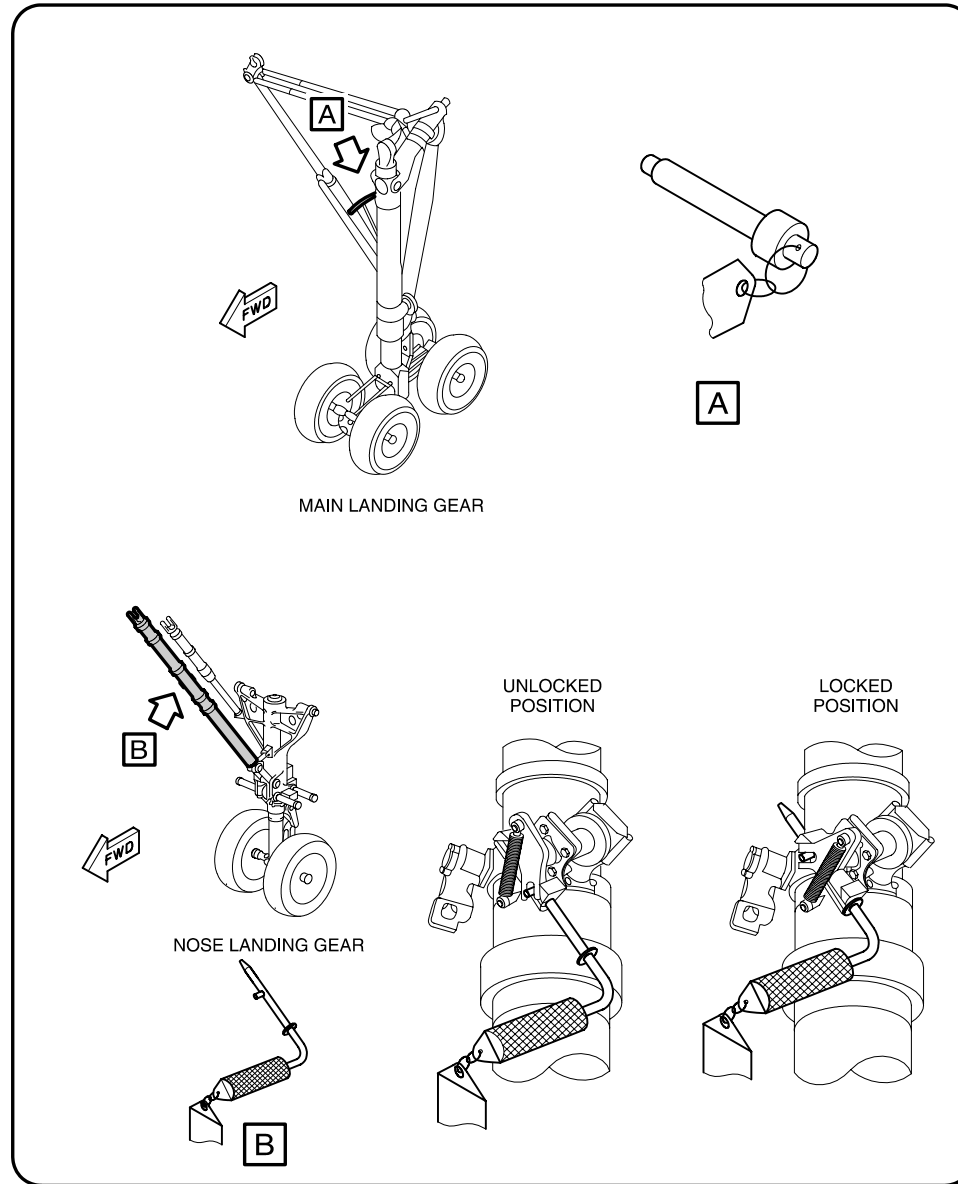


Landing Gear Ground Lock Safety Pin - Installation


A300-600 ST
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

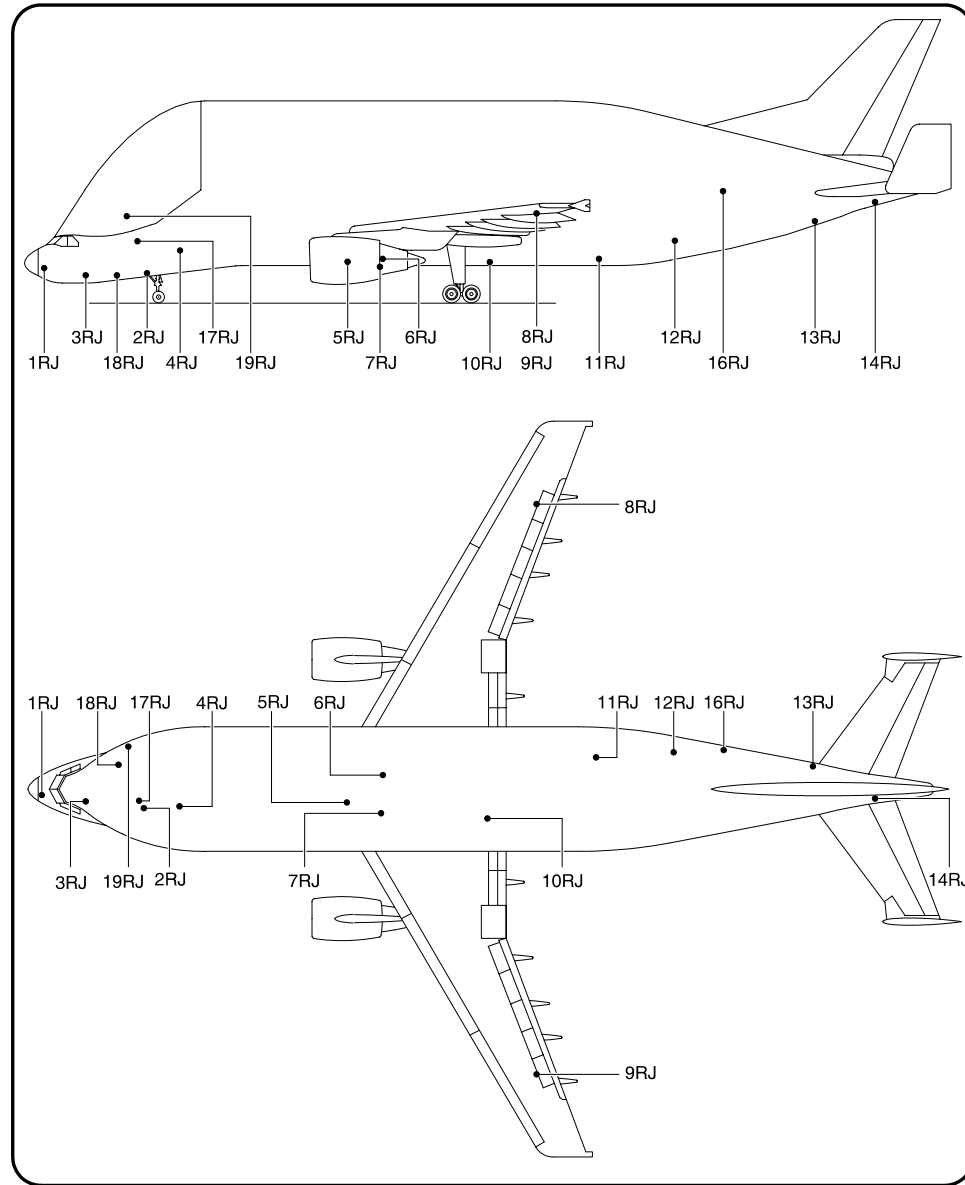

Interphone Jack Sockets - Location

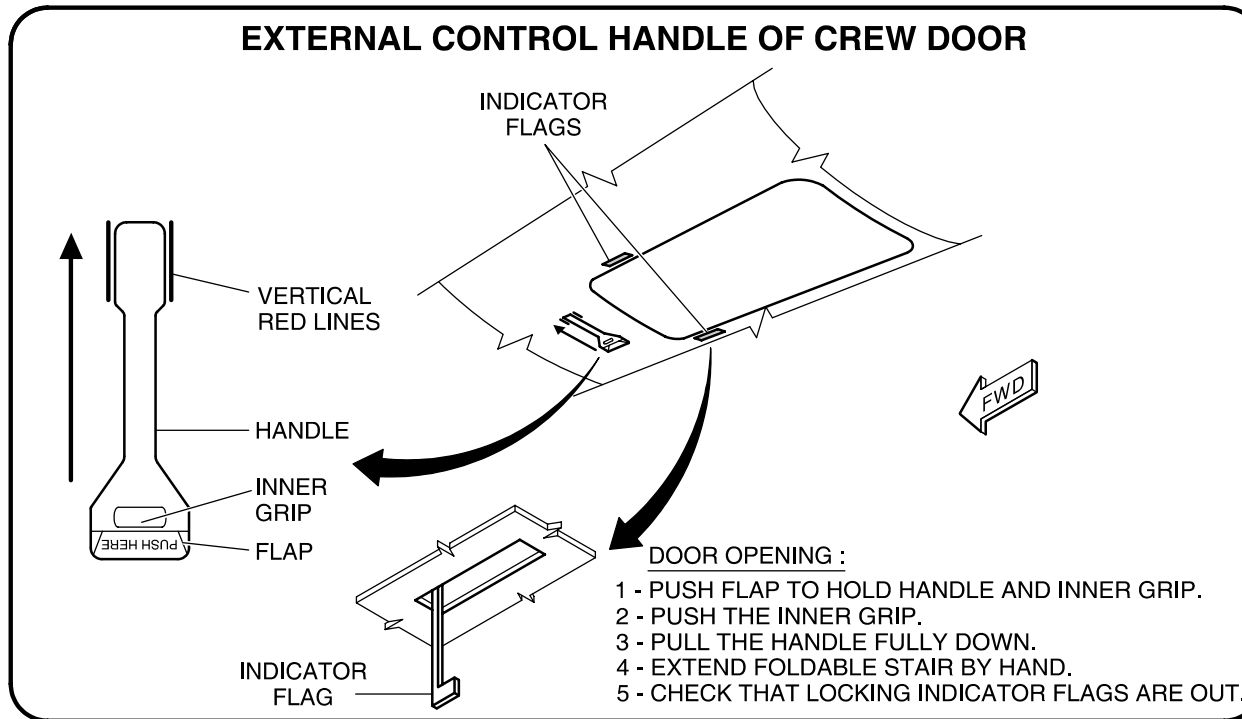


A300-600 ST
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

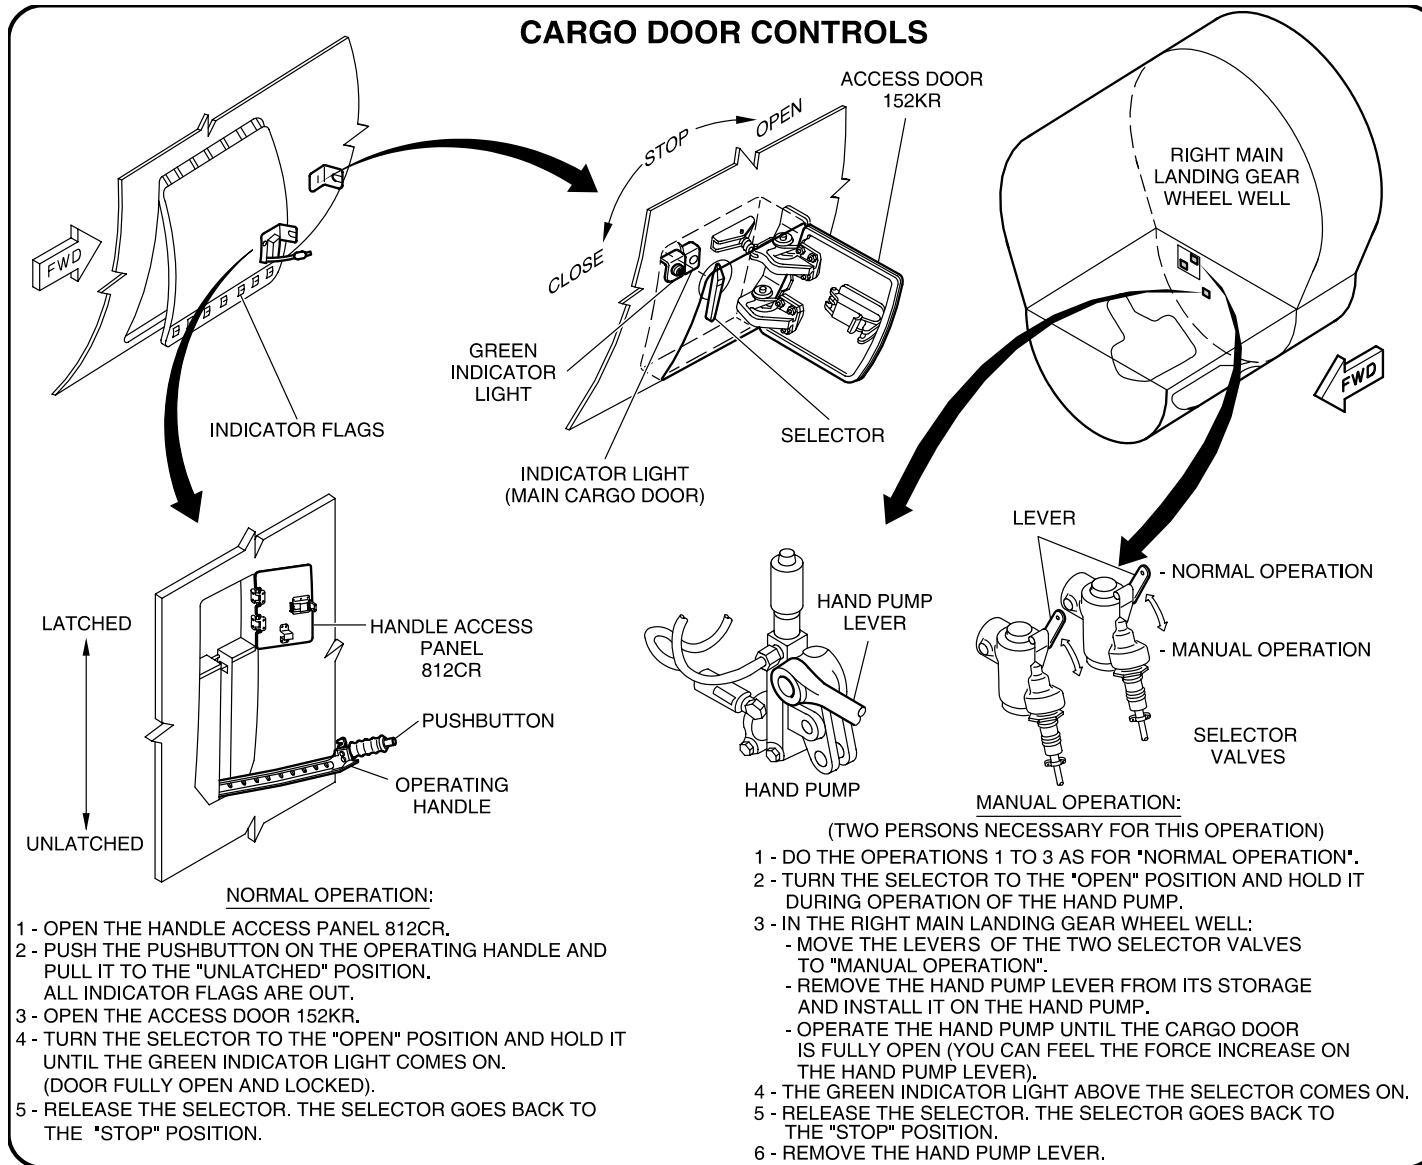

Cargo Door - Opening


A300-600 ST

AIRCRAFT RESCUE AND FIRE FIGHTING CHART

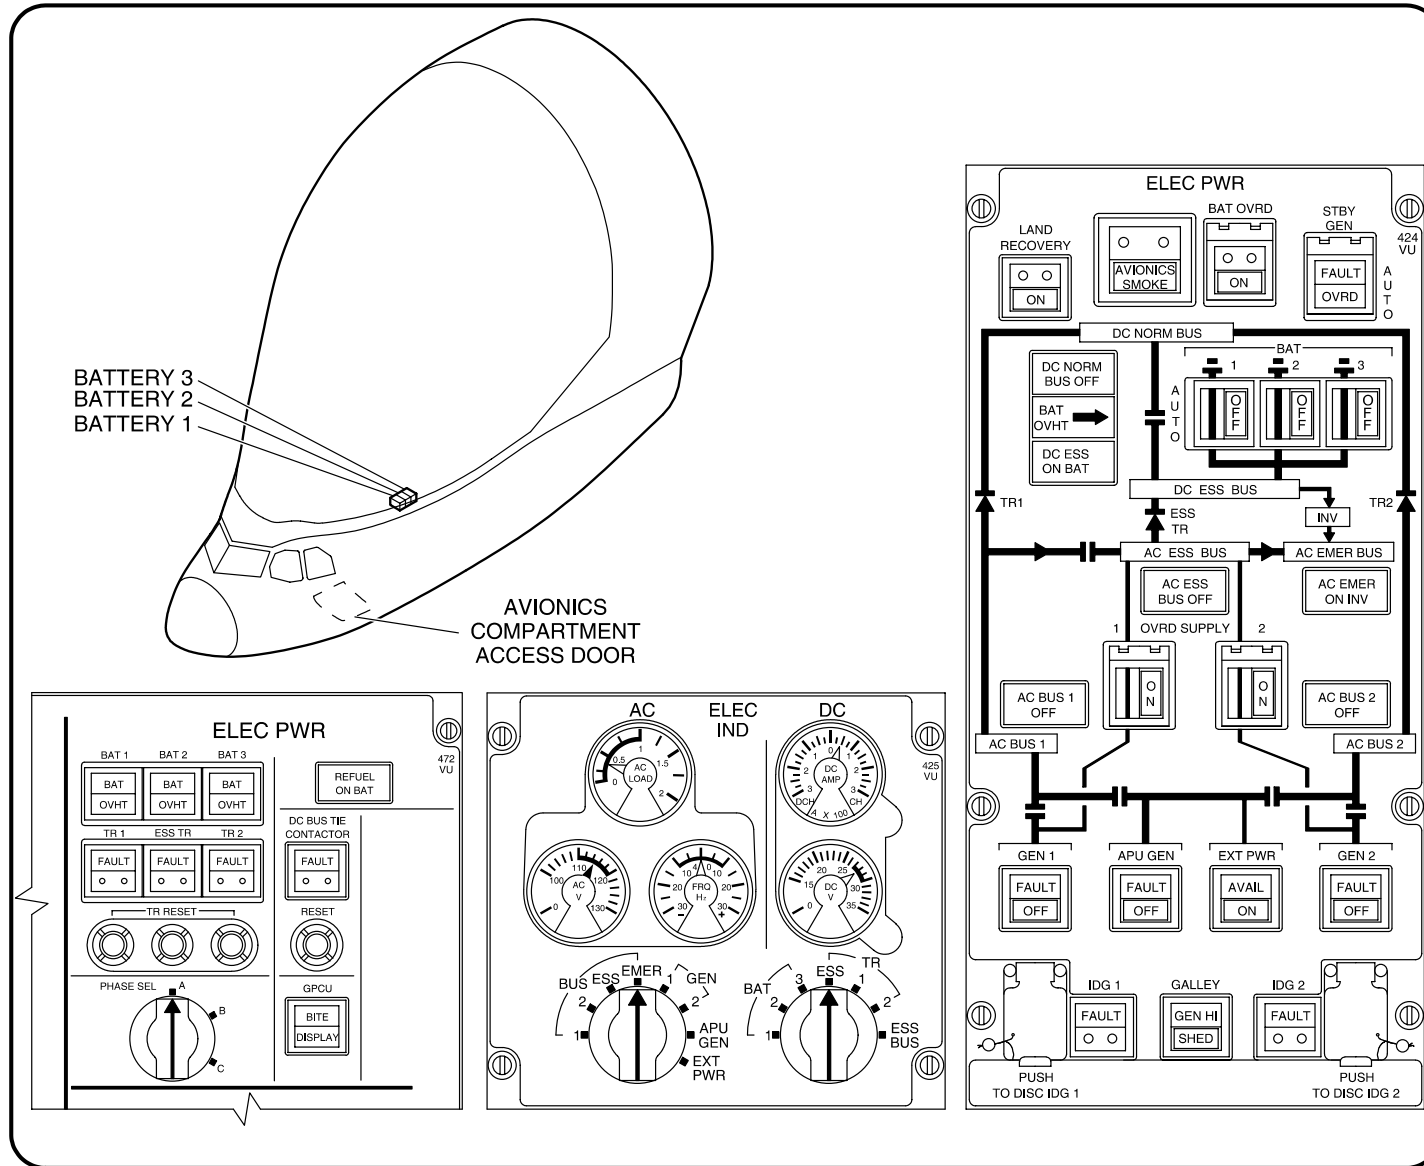


Batteries and Control Panel - Location

A300-600 ST
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

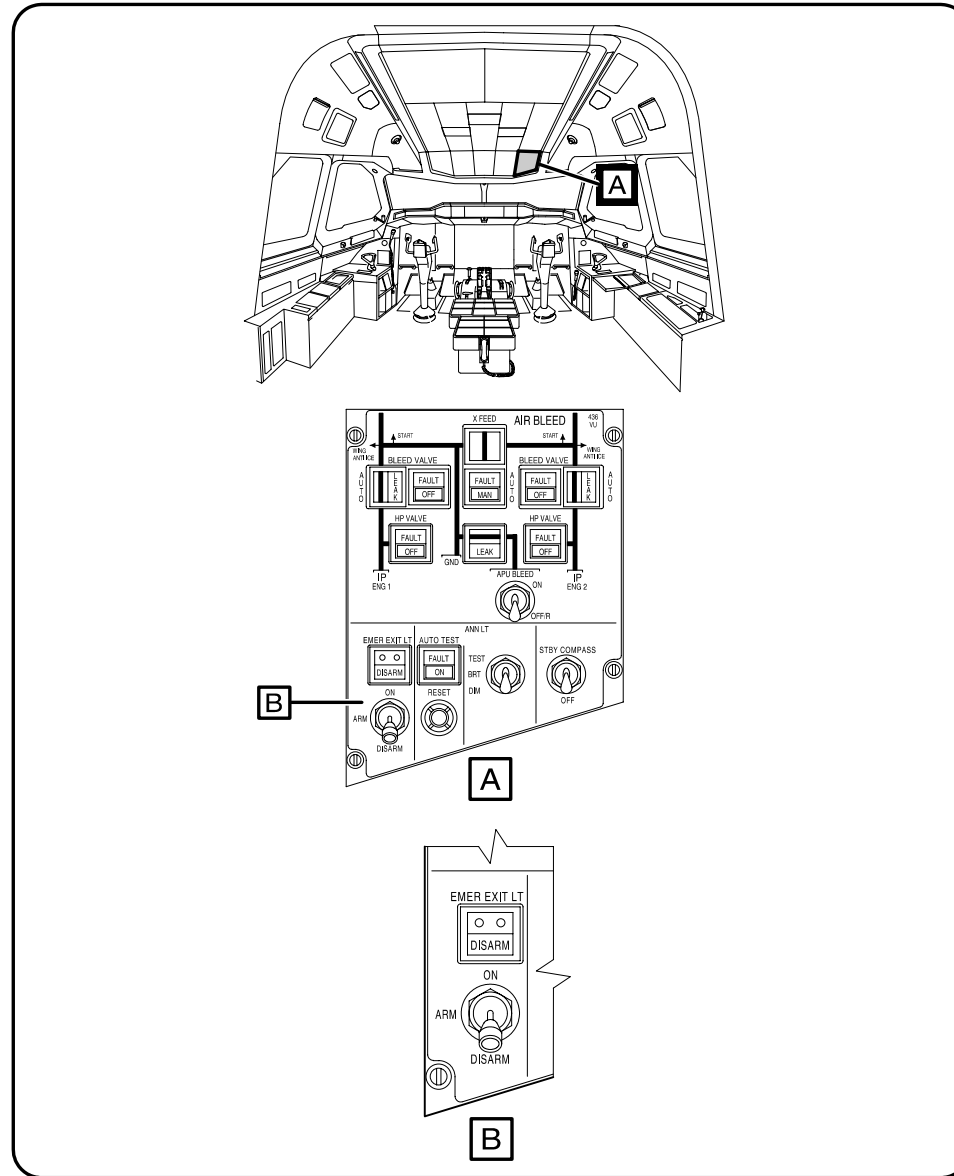


Emergency Exit Light Control Panel - Location

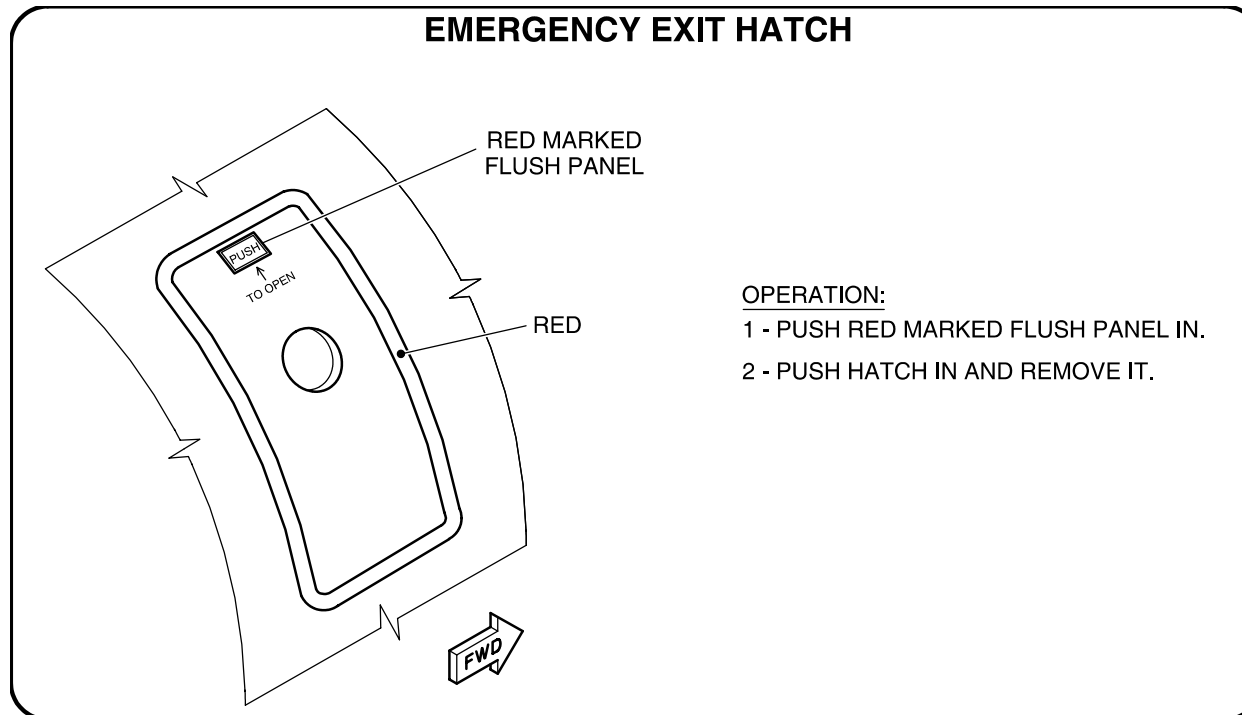


A300-600 ST

AIRCRAFT RESCUE AND FIRE FIGHTING CHART

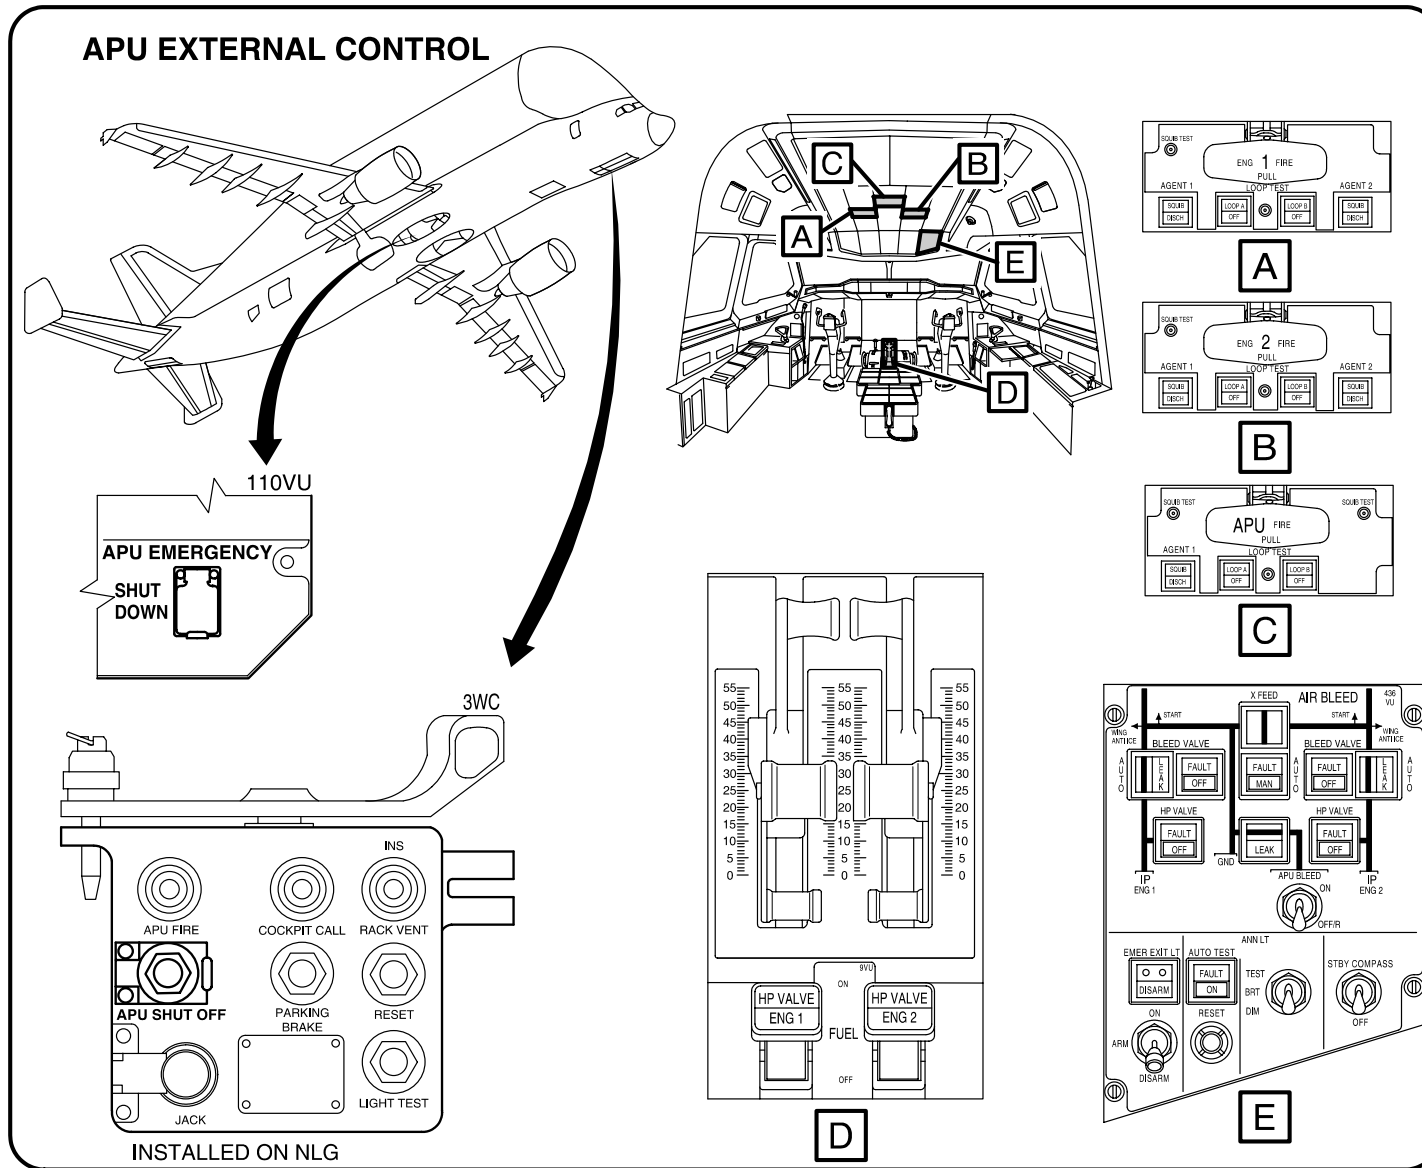

Engine and APU Controls and FIRE Panels - Location


BULK CARGO COMPARTMENT DOOR CONTROL

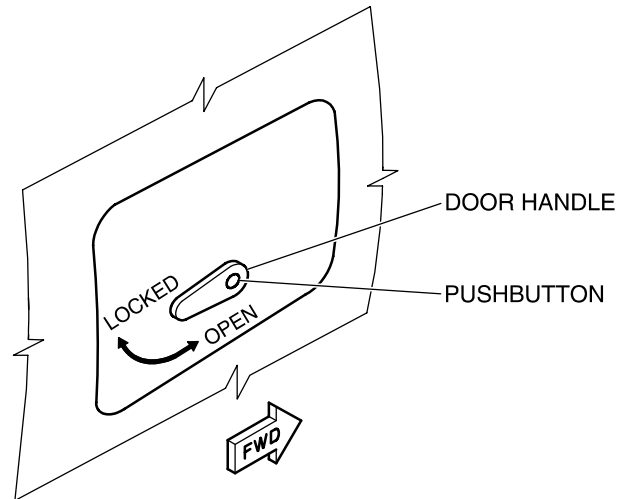

OPERATION :

- 1 - PUSH THE PUSHBUTTON TO RELEASE THE DOOR HANDLE.
- 2 - MOVE THE HANDLE DOWN TO THE "OPEN" POSITION.
- 3 - PUSH THE BULK CARGO DOOR IN. PUT THE DOOR HANDLE BACK IN THE "LOCKED" POSITION AND INTO THE RECESS.
- 4 - PUSH THE BULK DOOR UP UNTIL THE HOOK ENGAGES.


A300-600 ST
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

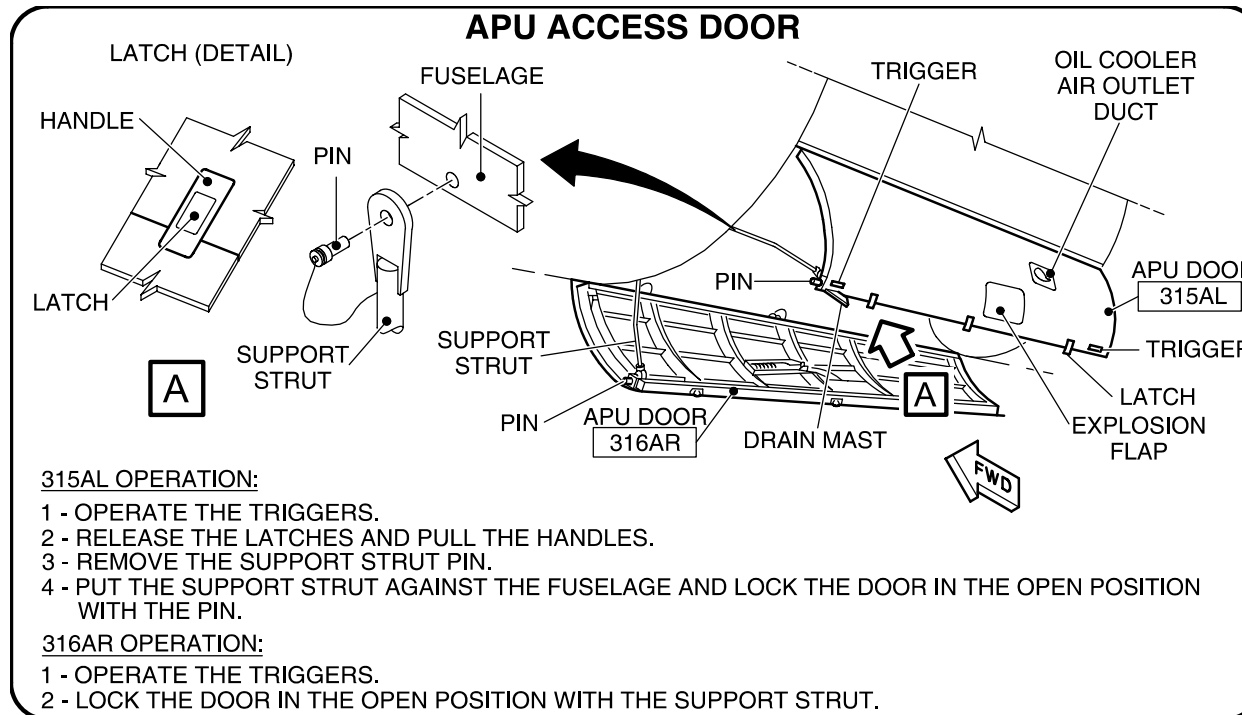

APU Compartment Access

A300-600 ST
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

GROUND CLEARANCES

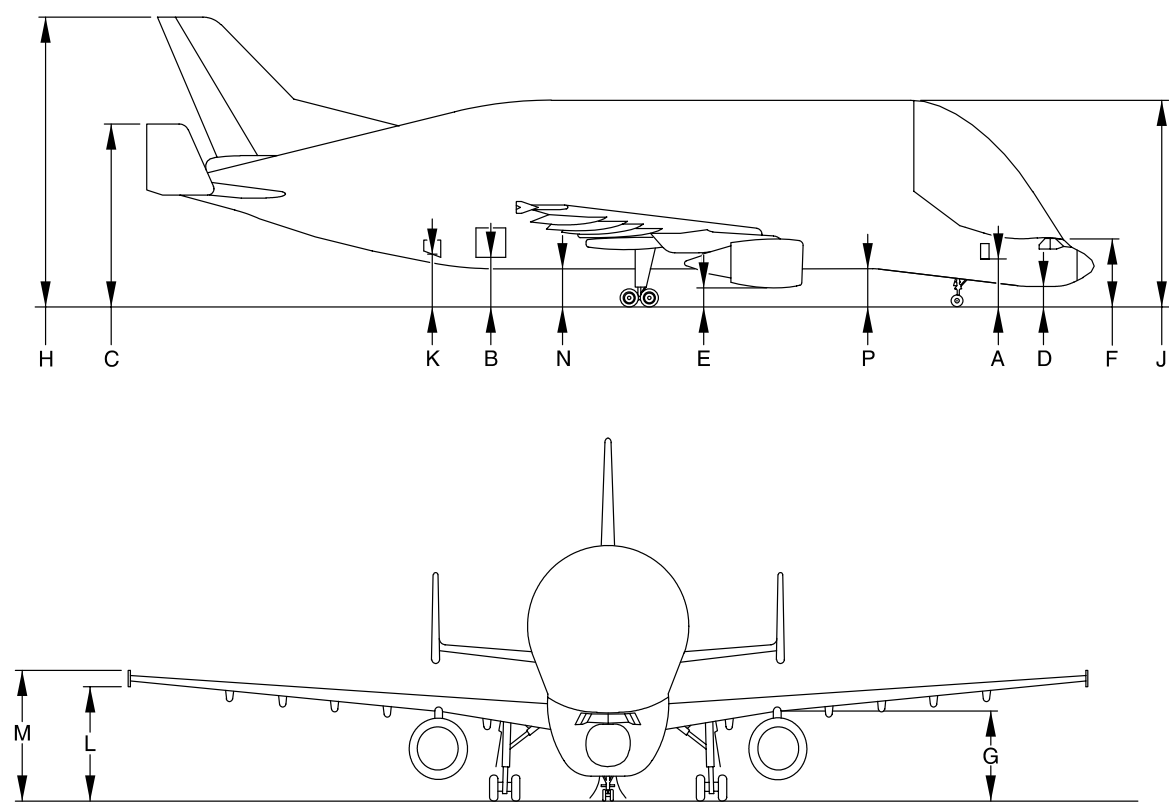

DIMENSIONS ARE APPROXIMATE

	m	ft		m	ft
A	2.90	9.51	H	17.24	56.56
B	2.80	9.19	J	12.23	40.12
C	10.83	35.53	K	2.85	9.35
D	1.16	3.81	L	5.60	18.37
E	1.06	3.48	M	6.37	20.90
F	4.79	15.72	N	2.18	7.15
G	4.65	15.26	P	1.90	6.23

Aircraft Ground Clearances