



SUBJECT: COWLING MAINTENANCE STEPS (P/N 350-200094/104)

Installation of the RH & LH side maintenance steps provide a safe stepping surface for personnel working in main rotor head area or main transmission.

THE INFORMATION CONTAINED IN THIS DOCUMENT SHALL BE TREATED AS THE PROPERTY OF EUROCOPTER CANADA LIMITED (ECL). THE RECIPIENT OF THIS DOCUMENT SHALL NOT DISCLOSE ANY INFORMATION CONTAINED HEREIN TO THIRD PARTIES WITHOUT THE WRITTEN PERMISSION OF ECL, AND SHALL NOT USE OR REPRODUCE THIS DOCUMENT IN WHOLE OR IN PART FOR ANY PURPOSE OTHER THAN ITS ORIGINALLY INTENDED PURPOSE, OR TO EVALUATE ITS CONTENTS.

	NAME AND SIGNATURE	DATE	COMPANY DEPARTMENT
PREPARED BY:	<i>H. J. [Signature]</i>	May 26/00	ECL ENGINEERING
PREPARED BY:			ECL ENGINEERING
CHECKED BY:	<i>E. Timmins</i>	MAY 26 TH 2000	ECL ENGINEERING
CHECKED BY:			ECL ENGINEERING
APPROVED BY:	<i>[Signature]</i>	May 26/00	ECL ENGINEERING
APPROVED BY: TRANSPORT CANADA	N/A		



LIST OF REVISIONS

REVISION	AFFECTED PAGES	DESCRIPTION AND REASON	PREPARED (SIGNATURE AND DATE)	CHECKED (SIGNATURE AND DATE)	APPROVED (SIGNATURE AND DATE)
0	All	Original Issue	<i>H. T. [Signature]</i> May 26/00	<i>C. Timmins</i> MAY 26 TH 2000	<i>[Signature]</i> May 26/00

A. DESCRIPTION

1. This Maintenance Manual Supplement covers the required maintenance action for the LH & RH Maintenance Steps (P/N 350-200094/104).

B. INSPECTION SCHEDULE

NO.	INSPECTION OR MAINTENANCE WORK	REF.	INTERVAL	REMARKS
1	Visually inspect modified area for condition		Every 100 flight hours to coincide with the 100 hrs helicopter inspection	Repair as required
2	Visually inspect edge of step cutout for wear and delaminating		Every 100 flight hours to coincide with the 100 hrs helicopter inspection	Repair as required

Table 1. Inspection Schedule

C. REMOVAL

NOTE : Due to the LH & RH Maintenance Steps consisting of a cutout in the transmission cowling, maintenance action is limited to the inspection for damage. In the event that any delamination has occurred in the modified area around the edge of the cutout, the cowling must be removed and repaired.

1. For removing of the transmission cowlings, refer to the AS350 Maintenance manual.
2. Repair damaged area using "standard shop practice for composite repair".

D. INSTALLATION

1. For installation of the transmission cowling refer to the AS350 Maintenance Manual.

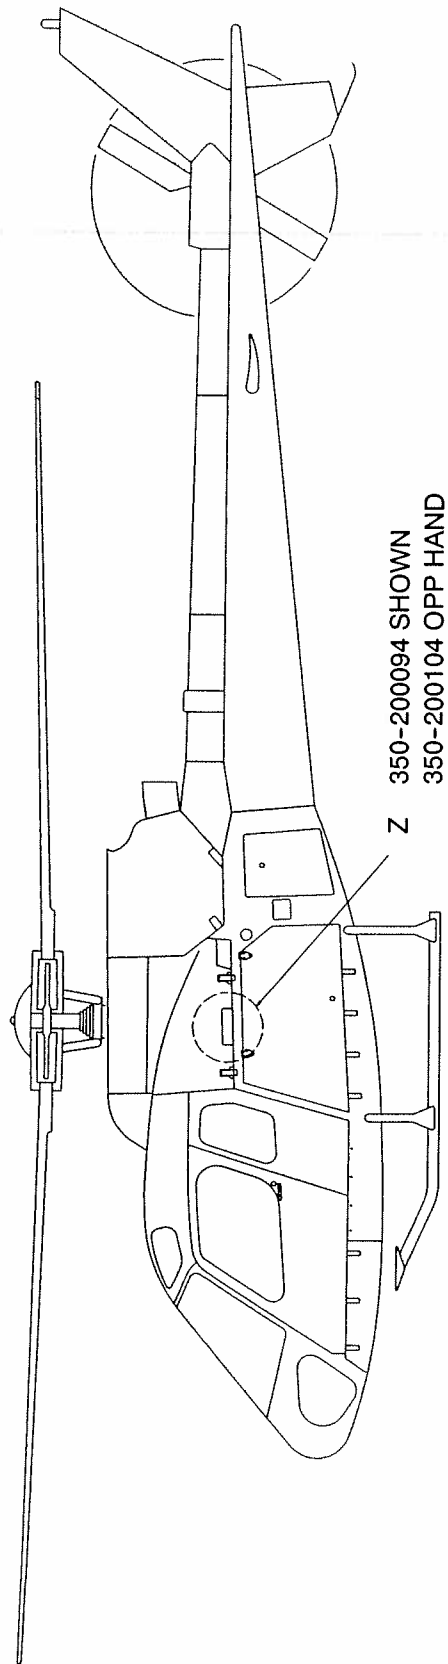


Figure 1 Cowling Maintenance Step