


 



AIRBUS HELICOPTERS CANADA LIMITED
SUBJECT:

Required maintenance for the Removable Door Pins (P/N 135-201014).

APPLICABILITY :

 Aircraft with the subject modification embodied in accordance with TCCA STC
 No. SH16-14 or any relevant foreign approvals.

THE INFORMATION CONTAINED IN THIS DOCUMENT SHALL BE TREATED AS THE PROPERTY OF AIRBUS HELICOPTERS CANADA LIMITED (AHCA). THE RECIPIENT OF THIS DOCUMENT SHALL NOT DISCLOSE ANY INFORMATION CONTAINED HEREIN TO THIRD PARTIES WITHOUT THE WRITTEN PERMISSION OF AHCA, AND SHALL NOT USE OR REPRODUCE THIS DOCUMENT IN WHOLE OR IN PART FOR ANY PURPOSE OTHER THAN ITS ORIGINALLY INTENDED PURPOSE, OR TO EVALUATE ITS CONTENTS.

	NAME AND SIGNATURE	DATE	COMPANY DEPARTMENT
PREPARED BY:	D. Kerr 	7 March, 2016	AHCA ENGINEERING
PREPARED BY:			
CHECKED BY:	C. Timmins 	7 th March 2016	AHCA ENGINEERING
CHECKED BY:	D. Kapuscinsky 	MAR 07 2016	AHCA QUALITY ASSURANCE
REV. 0 ACCEPTED (Civil AW Authority)	(As per ICA Compliance Check Sheet) 	9 th March 2016	TCCA
REV. 0 RELEASED BY:	P. Sharpe 	11 March 2016	AHCA ENGINEERING

CONTENTS

SECTION	TITLE	PAGE
1	GENERAL	4
2	AIRWORTHINESS LIMITATIONS	8
3	CONTROL AND OPERATION	9
4	INSPECTION SCHEDULE AND MAINTENANCE ACTION	9
5	OVERHAUL REQUIREMENTS	10
6	TROUBLESHOOTING	10
7	SPECIAL TOOLING	10
8	REMOVAL AND REPLACEMENT	10
9	WEIGHT AND BALANCE DATA	11
10	PLACARDS AND MARKINGS	11

FIGURES

FIGURE	TITLE	PAGE
1	General Layout	4
2	Detail of Upper Hinge	5
3	Detail of Lower Hinge	6

TABLES

TABLE	TITLE	PAGE
1	Inspection Schedule and Maintenance Action Every 500 FH	9

Transport Canada - Accepted

AIRBUS HELICOPTERS CANADA LIMITED

1. GENERAL

- A. Removable Door Pins are utilized on the LH or RH or both doors to provide a "tool free" means to remove and reinstall the hinged doors. Pip pins replace the existing bolts and a spacer clip fits over the existing lower door fitting to replace the existing washers that are no longer used. Safety pins slide through holes in the bottom of the pip pins providing additional security. A Lanyard attached to each pip pin prevents the safety pin from being misplaced. Refer to General Layout, Figure 1.

The Removable Door Pins are installed in accordance with Master Drawing List MDL-14-005.

- B. These Instructions for Continued Airworthiness are applicable to aircraft with the subject modification embodied.

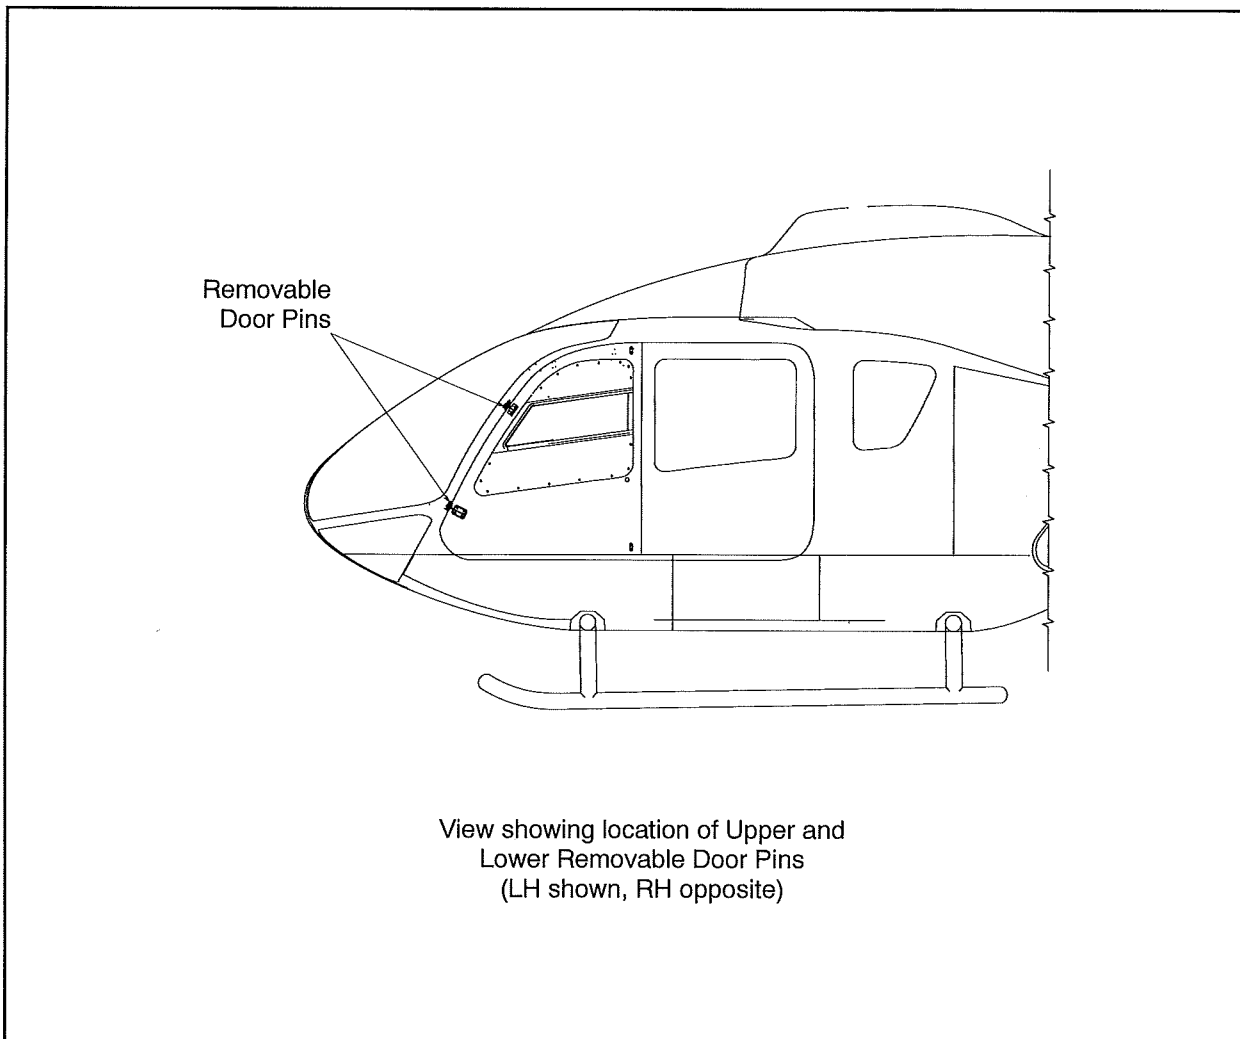


Figure 1 General Layout

Transport Canada Accepted

AIRBUS HELICOPTERS CANADA LIMITED

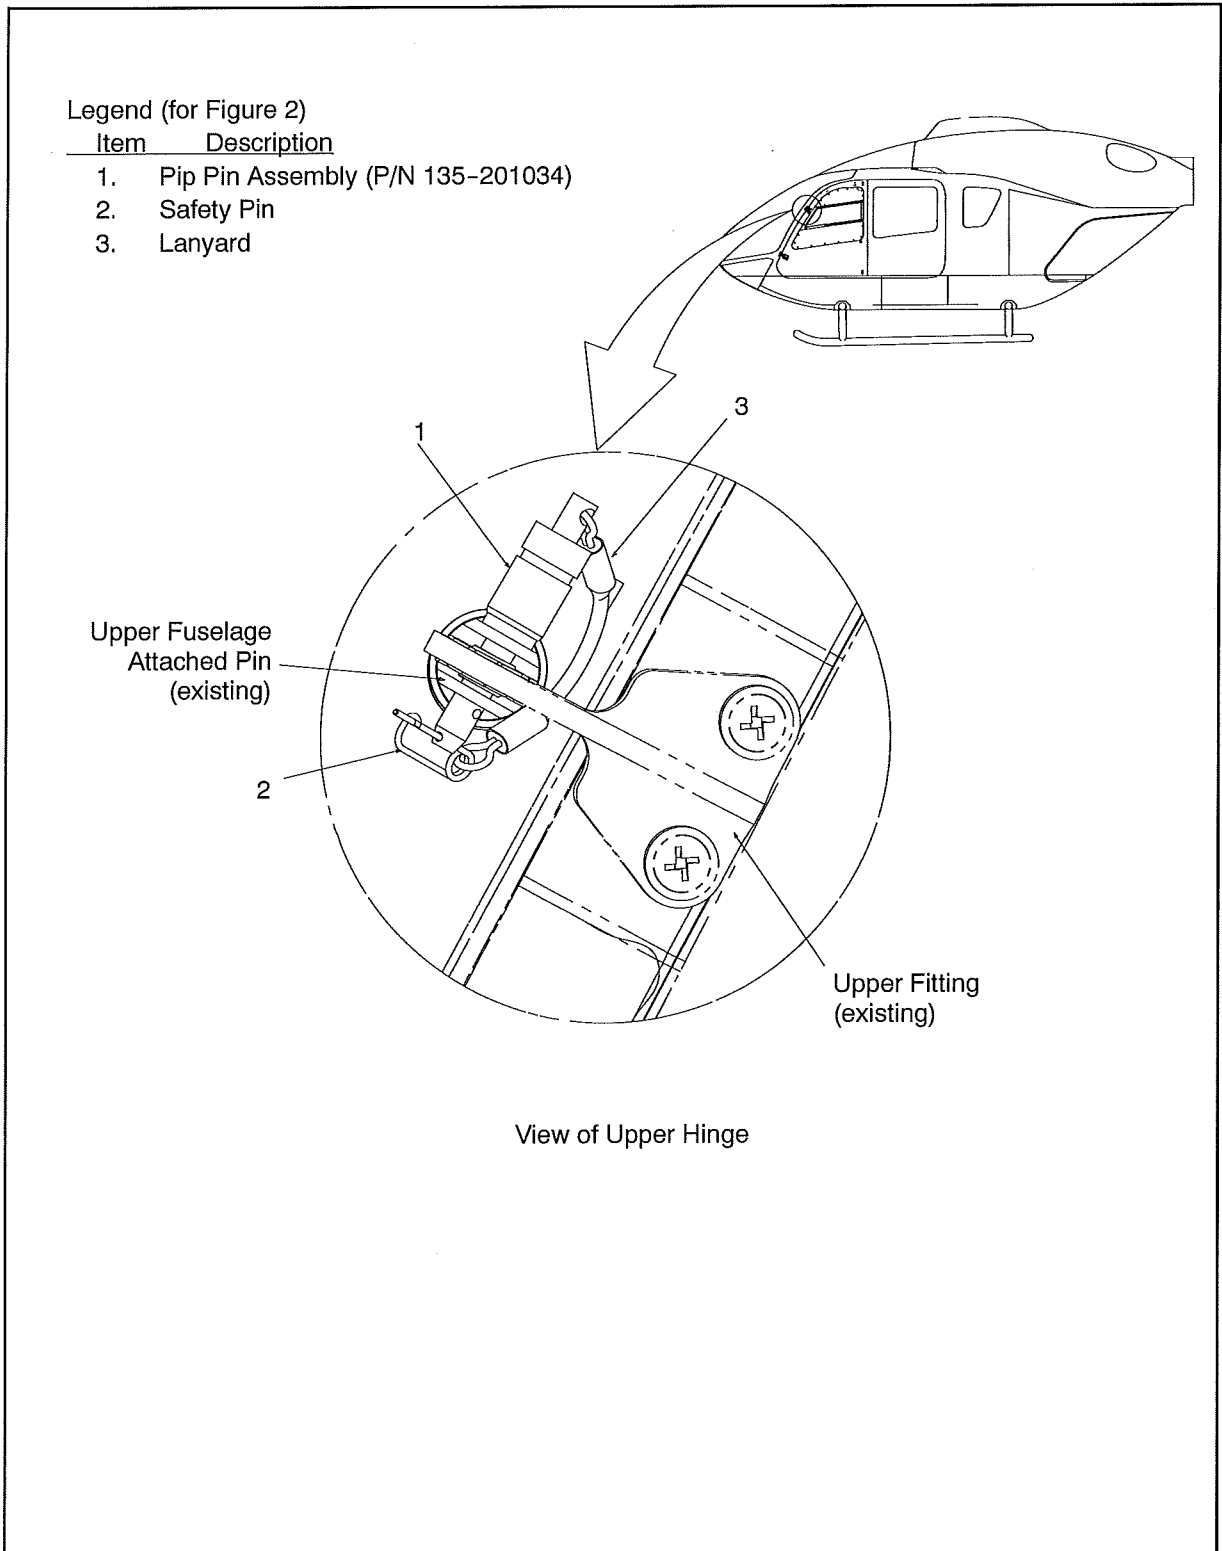


Figure 2 Detail of Upper Hinge

Transport Canada Accepted

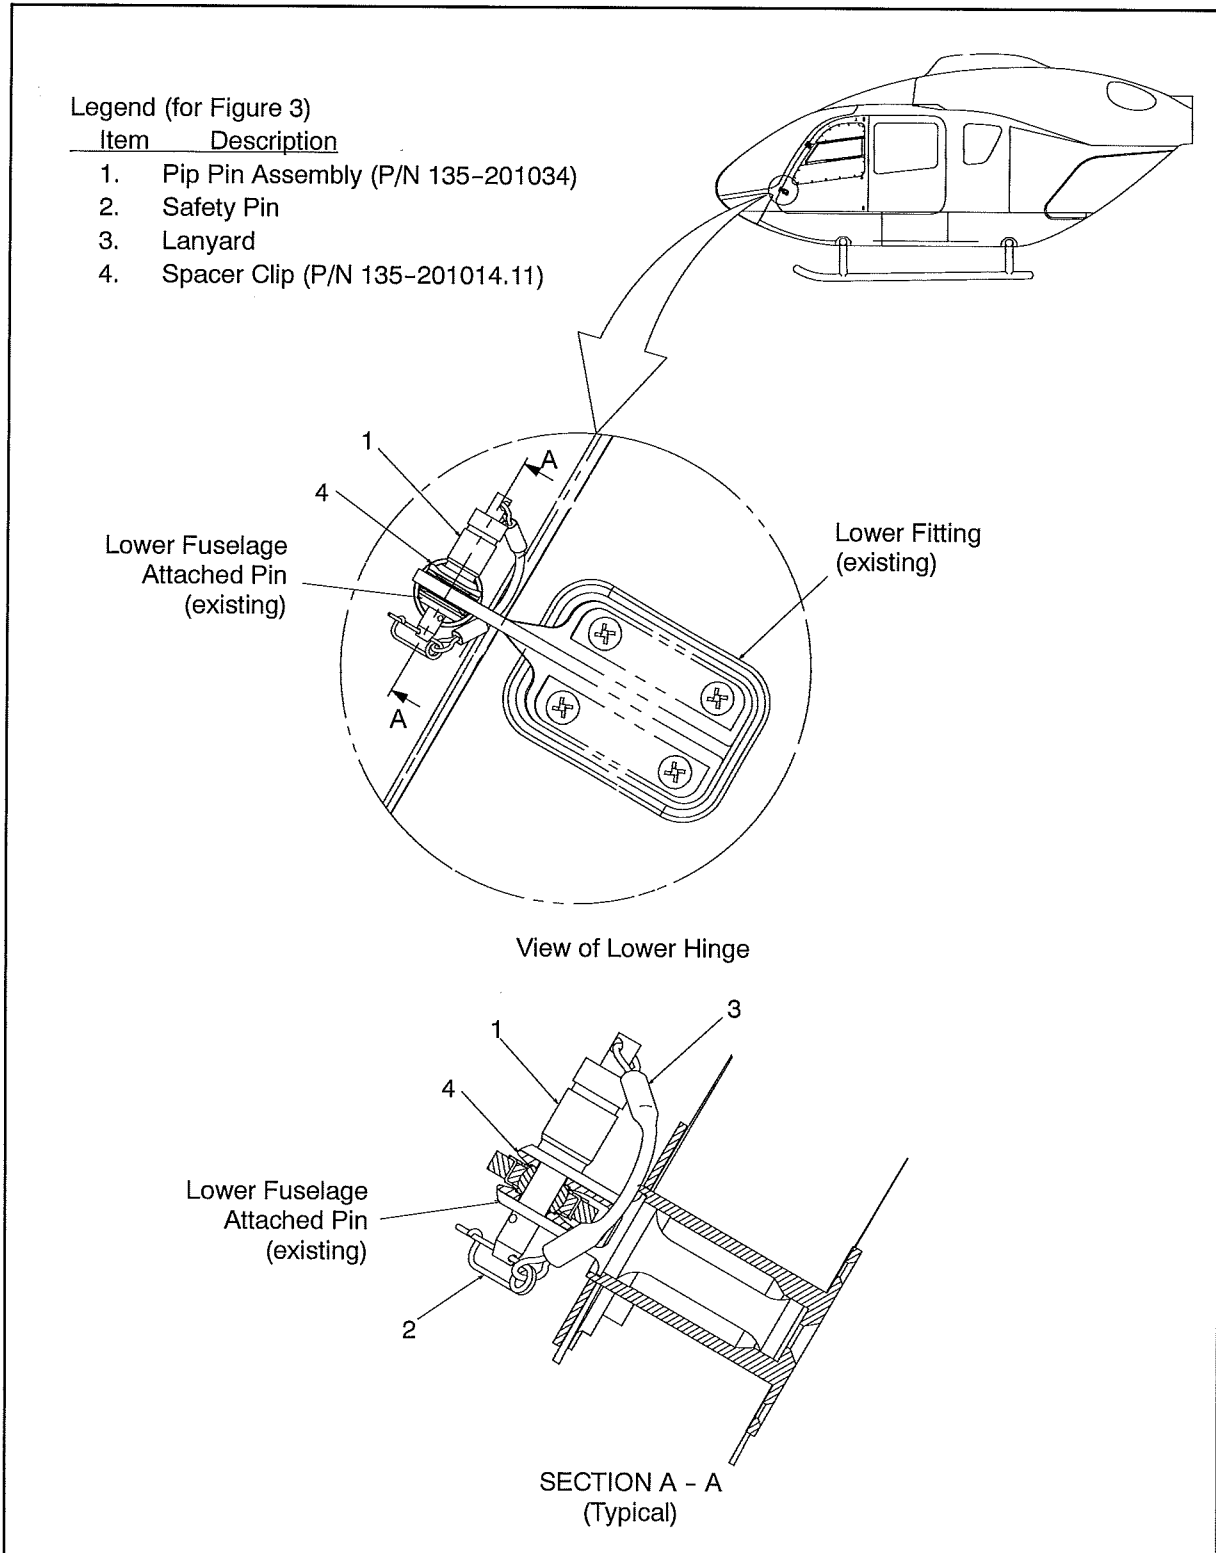


Figure 3 Detail of Lower Hinge

Transport Canada Accepted

AIRBUS HELICOPTERS CANADA LIMITED
C. REFERENCES

DOCUMENT	DOCUMENT TITLE
AMM	Aircraft Maintenance Manual
MTC	Standard Practices Manual

D. ABBREVIATIONS & DEFINITIONS

ABBREVIATION	DEFINITION
Acc'd	Accepted
AHCA	Airbus Helicopters Canada Limited
App'd	Approved
App	Appendix
A/W	Airworthiness
CAR	Canadian Aviation Regulations
D	Days
DAPM	Design Approval Procedures Manual
FAA	Federal Aviation Administration
FH	Flight Hours
hrs	hours
ICA	Instructions for Continued Airworthiness
LH	Left Hand
M	Months
MDL	Master Drawing List
P/N	Part Number
ref.	reference
Rev.	Revision
RH	Right Hand
STC	Supplemental Type Certificate
TCCA	Transport Canada Civil Aviation
§§	Sections

E. UNITS OF MEASUREMENT

ABBREVIATION / SYMBOL	UNIT OF MEASUREMENT
in	inch
kg	kilogram
lb	pound
m	meter

Transport Canada Accepted



AIRBUS HELICOPTERS CANADA LIMITED

2. AIRWORTHINESS LIMITATIONS

The Airworthiness Limitations Section is approved by the Minister and specifies maintenance required by any applicable airworthiness or operating rule unless an alternative program has been approved by the Minister.

The Airworthiness Limitations Section is FAA approved and specifies inspections and other maintenance required under §§43.16 and 91.403 of the Federal Aviation Regulations unless an alternative program has been FAA approved.

The Airworthiness Limitations Section is approved and variations must also be approved.

No Airworthiness Limitations associated with this installation.

Transport Canada Accepted

AIRBUS HELICOPTERS CANADA LIMITED
3. CONTROL AND OPERATION

Control and operation of the aircraft remain unchanged.

4. INSPECTION SCHEDULE AND MAINTENANCE ACTION
4.1. INSPECTION SCHEDULE

4.1.1. Every 12 months (to coincide with the 12 month helicopter inspection):

ITEM	INSPECTION OR MAINTENANCE WORK	CORRECTIVE ACTION
A	- Check pip pin assembly, item 1, in Figures 2 and 3 for: a. security	a. Ensure safety pin, item 2, is secured to bottom of pip pin assembly. Refer to Figures 2 and 3.
B	- Visually inspect the pip pin assembly, item 1, in Figures 2 and 3 for: a. corrosion b. function	a. No corrosion is allowed. If corrosion is evident, contact AHCA for replacement part. b. Ensure smooth movement of the pin when depressing the pushbutton.
C	- Check lanyard, item 3, in Figures 2 and 3 for: a. security b. wear (areas have become worn)	a. Ensure lanyard is secure at attachment points. b. Wear is not permitted. If wear is evident, contact AHCA for replacement parts.
D	- Visually inspect spacer clip, item 4, in Figure 3 for: a. corrosion	a. No corrosion is allowed. If corrosion is evident, contact AHCA for replacement part.

 Table 1 Inspection Schedule and Maintenance Action
 Every 12 months

Transport Canada Accepted

AIRBUS HELICOPTERS CANADA LIMITED**5. OVERHAUL REQUIREMENTS**

Contact AHCA for replacement parts. No overhaul information required for this installation.

For replacement components:

Airbus Helicopters Canada Limited
1100 Gilmore Road, P.O. Box 250
Fort Erie, Ontario L2A 5M9 Canada
Telephone: (905) 871-7772
Telefax: (905) 871-3599

Website: www.airbushelicopters.ca

6. TROUBLESHOOTING

There are no unique characteristics which require special troubleshooting techniques.

7. SPECIAL TOOLING

No special test equipment or tools are required. Standard tools are adequate.

8. REMOVAL AND REPLACEMENT

NOTE: Removal is identical for both LH and RH hinged doors.

A. REMOVAL**1) UPPER AND LOWER REMOVABLE DOOR PINS (Refer to Figures 2 & 3)**

- a) With the door open, remove the gas spring. Remove gas spring in accordance with EC 135 AMM, Chapter 52-11-00, 4-2.
- b) Remove safety pins (2) from the bottom of the pip pin assemblies (1, 2 places). Depress top of each pip pin assembly (1) and remove.
- c) Remove the door.

NOTE: Spacer clip (4) will come away with lower door fitting.

B. REPLACEMENT**1) UPPER AND LOWER REMOVABLE DOOR PINS (Refer to Figures 2 & 3)**

- a) Position door, with spacer clip (4) attached over the lower door fitting hole.
- b) Insert both pip pin assemblies (1) and secure using safety pins (2).
- c) Install the gas spring in accordance with EC 135 AMM, Chapter 52-11-00, 4-2.

Transport Canada Accepted



AIRBUS HELICOPTERS CANADA LIMITED

9. WEIGHT AND BALANCE DATA

No change.

10. PLACARDS AND MARKINGS

There are no Placards and Markings with this modification.

Transport Canada Accepted

